



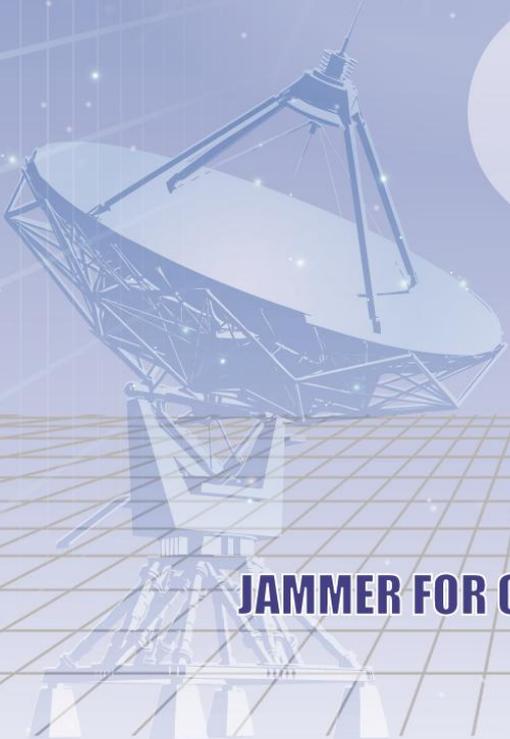

## [TSJ-4G-2061 4G & 4G LTE Six Band Jammer](#)

### Operator Manual

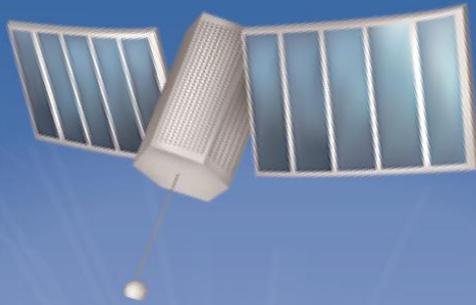

# USER'S MANUAL

JAMMER FOR CELLULAR & WIRELESS SIGNAL

Being familiar immediately

Thank you for you choosing the TSJ-4G-2061. Here we will introduce the basic functions of this versatile and powerful jammer, so that you will have better understanding of the positions of the buttons and function of the unit.



Elevation

Left side elevation



Right side elevation



TOP side elevation



CDMA/GSM/DCS/PCS/3G/2.4G/4GWIMAX RF Output ports (connect antennas)

○ **Technology index**

Output port	Frequency	Average out-putting power	Channel out-putting power
CDMA	830-895MHz	35dBm	8dBm/30KHz(min)
GSM	920-965MHz	35dBm	8dBm/30KHz(min)
DCS	1800-1885MHz	33dBm	2dBm/30KHz(min)
3G	2105-2175MHz	33dBm	2dBm/30KHz(min)
2.4G	2400-2500MHz	30dBm	5dBm/30KHz(min)
4G1(WIMAX)	2615-2695MHz	30dBm	0dBm/30KHz(min)
Power supply: AC adapter (AC220V-DC12V)			
Shielding Radius: (2-40) meters@-75dBm still depends on the strength signal in given area.			
Rules of installation: UL (E190582) CSA (LR 112971 Level 3)			
Dimension: (width, height, length) 140x51x305mm			

\*Standard configuration – custom tuning available – all units are tuned specifically for destination country unless otherwise specified by buyer.

○ **Starting use**

○ **Open up the packaging**

○ **Connecting system**

After connecting all of the antennas to their proper positions, please connect the power supply wire onto the device's power port, and connect the other side to the power supply jack.



○ **Turning on your jammer**

After connecting all of the surrounding elements and tie wires, please press the switch of left side to ON then the jammer will be working normally. The power pilot lamp will be green



## Turning off your jammer

- ① Finding the switch of system's main-power supply on the system's left side faceplate and turning it off.

## Notices

- ① Please do not connect the power supply prior to connecting the antennas.
- ① The jammer should be installed in a location with good ventilation. Do not place the jammer on or near electrical appliances which could cause electromagnetic interference.
- ① Always prevent water from spilling on the jammer, particularly when using the jammer outdoors..
- ① For maximum effectiveness, the antenna should be vertical to the ground and the jammer should be placed at a height of approximately 2 meters.
- ① If using the jammer in a vehicle, please make sure the car output adapter is DC12V, as this machine only operate on DC12V, not DC24V.
- ① The *Remote* switch, where available, is reserved for future functionality and has no current function.

